


# TruCal™ - “No-Haz” Certified Gas Standards

THE MISSING LINK BETWEEN PERM-TUBE & HIGH PRESSURE CYLINDER CALIBRATION SYSTEMS!

TRUCAL™ - CERTIFIED GAS STANDARDS  
PRODUCT BRIEF

## KEY BENEFITS

- Certified Gas Standards-in-a-Box with excellent stability & shelf-life.
- Low Pressure Class 2.2 gases allow for rapid, low cost No-Haz TruCal™ shipments! The No-Haz TruCal™ advantage allows for rapid, cal gas shipments to any remote world location!
- Ideal for span gas calibration + verify applications on continuous analyzers or for low cost “Round Robin” quality check programs!
- Convenient, safer, more **cost-effective** alternative to high pressure cylinder systems.
- Simple TruCal™ bag replacement - **NO** cylinder handling, *demurrage, disposal or hazmat cylinder shipping.*
- Eliminates need for constant gas purging - a **big** disadvantage of all perm-tube systems.
- “Just Enough” 100L TruCal™ volume design eliminates wasted gas often experienced with expired cylinder standards.
- “Daisy-Chain” connection option of 2 or more TruCals™ possible for high gas volume applications if needed.
- Fully passivated **CaliPump-1C™** with universal power supply for controlled pressure & flow of cal gas to any gas analyzer.
- **CaliPump-1C™** can be manually or **externally** controlled for analyzer AUTO-CAL or AUTO-VERIFY functions & is equipped with an automatic “Out-of-Gas” alarm.
- Rapid delivery of fresh certified TruCal™ - No more multi-week delayed delivery of critical cylinder standards.
- Growing selection of available Certified TruCal™ gas standards!

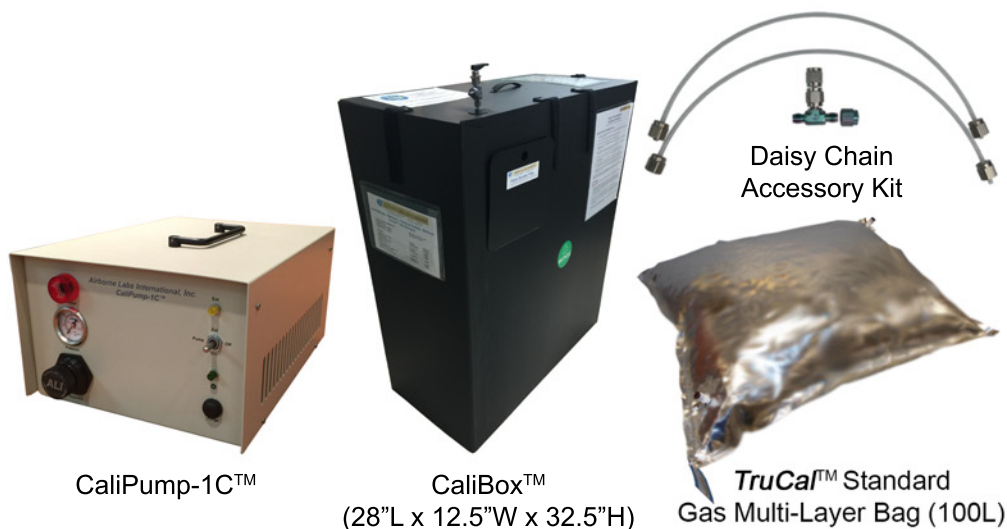

## TRUCAL™ STANDARDS (100L)

- CH<sub>4</sub> in CO<sub>2</sub> (THC Span)
- AA + Bz + COS (ABC) in CO<sub>2</sub> or N<sub>2</sub>
- AA + Bz in CO<sub>2</sub> or N<sub>2</sub>
- AA in CO<sub>2</sub> or N<sub>2</sub>
- Bz in CO<sub>2</sub> or N<sub>2</sub>
- COS in CO<sub>2</sub> or N<sub>2</sub> (TSC Span)
- Zero grade CO<sub>2</sub> or N<sub>2</sub>

Say “Goodbye” to the headaches of perm-tubes or high pressure cylinders & “Hello” to TruCals™!!



ISO / IEC 17025:2005 Accredited Laboratory

AIRBORNE LABS INTERNATIONAL, INC  
22C World's Fair Drive, Somerset, New Jersey 08873  
T: (+1) 732-302-1950 F: (+1) 732-302-3035  
E: Sales@Airbornelabs.com www.AirborneLabs.com